


Refilling BiB (Bag in Box) with CMB connector and cleaning the FK Fully automatic coffee machine

When '**Coffee empty**' is displayed on the screen, remove the empty BiB from the dispenser.

Kaffee Konzepte
Coffee empty

- Open the new BiB: Pull the CMB connector out of the pack and pull off the cap.

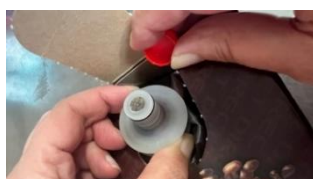

On the CMB connector, pull up on the outer ring and push it onto the BiB connector until it snaps into place.



Place the BiB into the machine with the connector down.

- Place a collecting container below the outlet nozzle to catch any water.



Press the '**Pumpe product 1**' button (the left button on the keypad inside the door), until the first concentrate drips out of the nozzle.



Only for the FK20 Models, pressing the '**Pumpe Product 2**' Button is necessary.

- Briefly press the '**Reinigen - FLUSH**' button to wash out the nozzle.

Cleaning, cleaning cycle if set:

The dispenser has a half-automatic cleaning cycle which will cause the front panel lights to flash at a Pre-set time. A message, '**Run clean cycle**', will be shown on display.

Run clean cycle
11:33 86 °C

The dispenser will continue to dispense drinks, but the lamps will flash until the cleaning function has been completed.

(Attention: Do not interrupt the cleaning function!)



To perform the cleaning function:

1. Remove the CMB connector(s) from the BiB and remove the BiB from the machine.
2. Place a collecting container of at least 3 litres under the coffee dispensing nozzles.
3. Plug the CMB connectors into the designated cleaning connectors in the door.



4. Press the **'Reinigen - FLUSH'** button. The question 'Hot water in the fridge?' is displayed (Heisswasser in Kuhlscr., drück. ←').

Hot water in the
fridge, press ←



5. Press the **← (enter) button** (to the left of the 'STOP' button).
The machine starts the semi-automatic cleaning cycle, draining both cleaning bottles and hammering the dispensing valves.
The dispenser will then perform the cleaning function automatically - **do not interrupt!**
When the cleaning function is completed, the lights stop flashing.
6. Pull out or pull down the connector(s). **Caution hot!**
7. Clean the machine and the drip tray with a clean cloth dipped in warm water to remove coffee spills, etc. **Do not use scouring cloths or solvents.**
8. Now you can place the BiB again into the machine.
Press the 'Pump 1' or 'Pump 2' button until concentrate drips out of the dispensing nozzle.
Press 'Clean' for approx. 2-3 seconds.
The machine is now ready for operation again.

To perform the cleaning function manually:

1. Remove the CMB connector(s) from the BiB and remove the BiB from the machine.
Plug the CMB connector into the designated cleaning connectors in the door.
2. Place a collecting container of at least 3 litres under the coffee dispensing nozzles.
3. Press the **← (enter) button** and the **'FLUSH' button simultaneously**. Then press the **'Reinigen - FLUSH' button**. The question 'Hot water in the fridge?' is displayed.
4. Press the **← (enter) button**. The machine starts the semi-automatic cleaning cycle - as described above. See point 5.

Only for the models FK20, FK2D and FK20D, pressing the button **'Pumpe Product 2' is necessary.**

(August 2025)